


PARTS BREAKDOWN

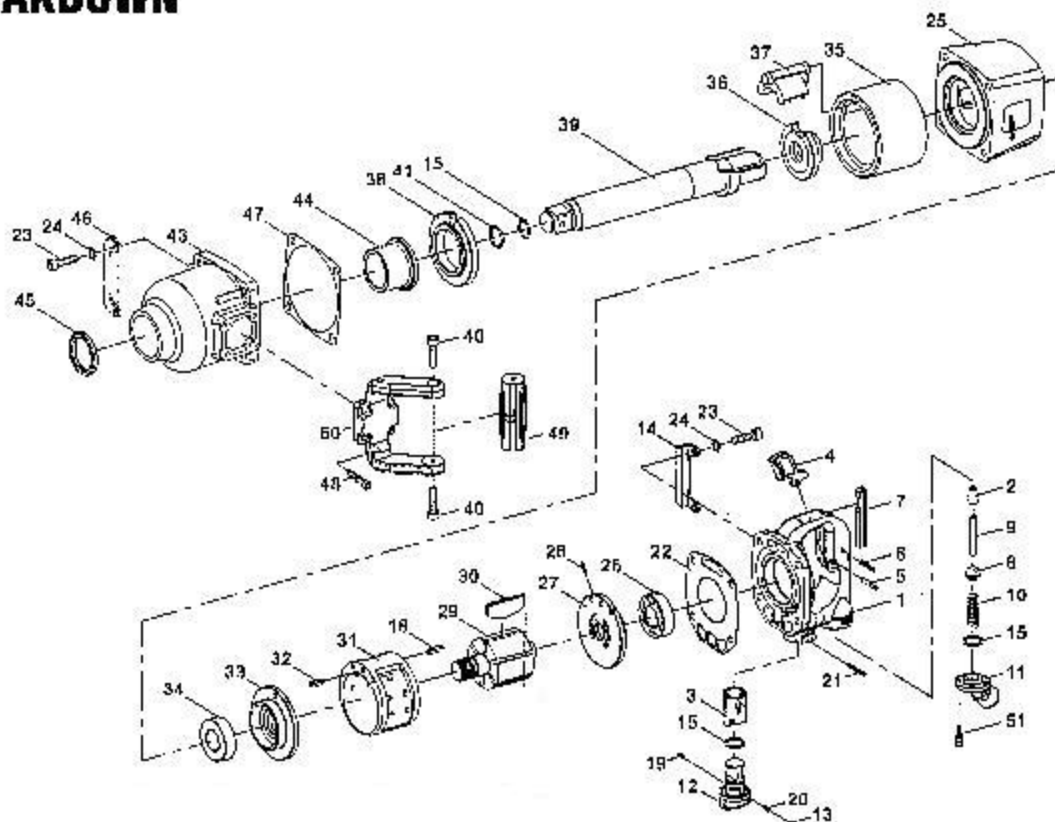

Parts List

Part No.	Description	Qty
1868-1	Trigger Handle Assembly	1
1868-2	Plunger Bushing	1
1868-3	Reverse Valve Bushing	1
1868-4	Inside Trigger	1
1868-5	Pin	1
1868-6	Spring Pin	1
1868-7	Slot Cover	1
1868-8	Throttle Valve	1
1868-9	Throttle Valve Plunger	1
1868-10	Throttle Valve Spring	1
1868-11	Angle Inlet Bushing	1
1868-12	Reverse Valve Knob	1
1868-13	Ball	1
1868-14	Protective Rubber Boot	1
1868-15	O-Ring	3
1868-18	Spring Pin	1
1868-19	Spring Pin	1
1868-20	Spring	1
1868-21	Spring Pin	1
1868-22	Handle Gasket	1
1868-23	Handle Cap Screw	8
1868-24	Lock Washer	8
1868-25	Motor Housing	1
1868-26	Bearing	1

Part No.	Description	Qty
1868-27	Rear End Plate Assembly	1
1868-28	Spring Pin	1
1868-29	Rotor	1
1868-30	Vane	6
1868-31	Cylinder Assembly	1
1868-32	Spring Pin	1
1868-33	Front End Plate	1
1868-34	Bearing	1
1868-35	Hammer Frame	1
1868-36	Hammer Cam	1
1868-37	Hammer	1
1868-38	Side Plate	1
1868-39	6" Anvil	1
1868-40	Screw	2
1868-41	Retainer Ring	1
1868-43	Hammer Case Assembly	1
1868-44	Hammer Case Bushing	1
1868-45	Oil Seal	1
1868-46	Protective Rubber Boot	1
1868-47	Hammer Case Gasket	1
1868-48	Dead Handle Cap Screw	4
1868-49	Handle Grip	1
1868-50	Swept Back Handle	1
1868-51	Screw Lock Washer	1