

Flat Mirrors – Mounting Kit B


Kit B includes:



(1) SHP-1



(1) H-8

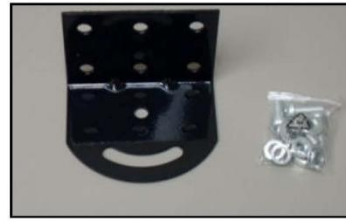


(1) H-6 & (1) H-19



(1) H-3

1. Attach base of H-6 base plate to wall.
(Screws and anchors for mounting of H-6 are not included).
2. Slide ball stub under cover of SHP-1. Screw ball cover into mounting base on back or mirror. DO NOT over-tighten screws – they need to be loose to properly adjust mirror once attached to bracket.
3. Attach H-8 to H-6 using (2) bolts, nuts and washers from H-19 bolt package. Do not yet tighten bolt on smiley portion of plate, adjust H-8 back and forth to achieve desired location and then tighten bolt on smiley of base plate.
4. Unscrew bolt from SHP-1 along with (1) large washer, put threaded end of SHP-1 through hole on H-3 and place washer and bolt onto threaded end of SHP-1. Attach H-3 to end of H-8 using remaining (2) bolts, nuts and washers from H-19.
5. From front adjust mirror to provide best angle of viewing area, once desired position is achieved tighten screws in SHP-1 to lock mirror into fixed position.

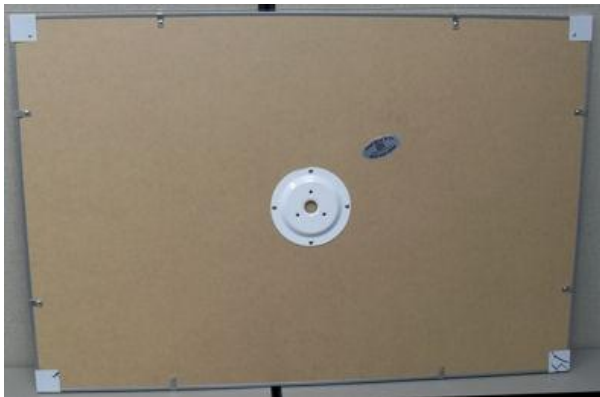

Back of Mirror

